


5-SPEED MAINDRIVE GEAR BEARING & SEAL INSTALLER

Use to install both bearings and the seal on the clutch side. *For more details see No.34734-IS instructions.*

No.34734-80 - Use on all Big Twin 5-speed 1980-1990.

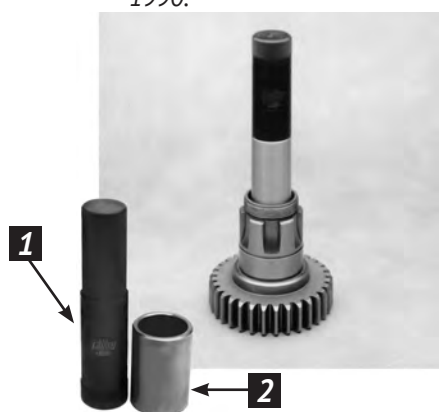

MAIN DRIVE GEAR BUSHING TOOL

Use to remove and install the main drive gear bushings, also to remove Big Twin cam bushing 1970-present. *For more details see No.1005-IS instructions.*

No.1005 - Use on all Big Twin 1936-86 4-Speeds.

PARTS AVAILABLE SEPARATELY


NO.	QTY.	DESCRIPTION	PART NO.
1	1	DRIVER	1005-1
2	1	SLEEVE	1005-2
3	1	INSTRUCTION SHEET	1005-IS



TRANSMISSION MAIN DRIVE GEAR BEARING TOOL

Use to install main bearing H-D No.8905 or No.8906 to the factory depth. *For more details see No.33428-IS instructions.*

No.33428-78 - Use on all Big Twin 1979-85 4-Speed.

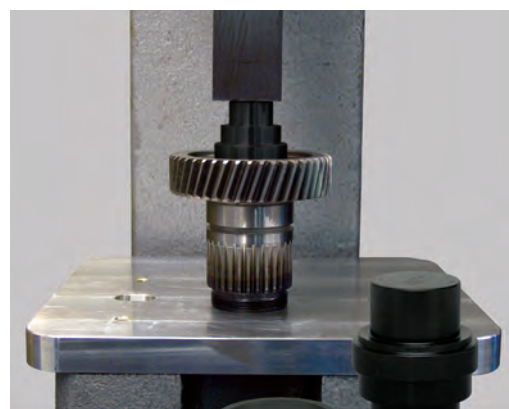

H-D® CRUISE DRIVE 6-SPEED MAIN DRIVE GEAR, BEARING & SEAL INSTALLER TOOL

Use this tool to safely install new main drive gear bearings and seal. This tool will hold bearings and seal square to it's bore, eliminating any marring of the bearings and seals and installing both to the right depth. This tool is used in the same manner as JIMS® Tool No.37842-91 that you've used for years. *For more details see No.986-IS instructions.*

No.986 - Use on all 2006-present Dyna™ and 2007-present FL & FXST.

PARTS AVAILABLE SEPARATELY

NO.	QTY.	DESCRIPTION	PART NO.
1	1	BEARING REMOVER	986-1
2	1	SEAL INSTALLER	986-2
3	1	INSTRUCTION SHEET	986-IS



MAIN DRIVE GEAR BEARING TOOL

Use to install inner and outer 5th gear bearings to factory depth. New bearing depth incorporated, will still work on early depth. *For more details see No.37842-IS instructions.*

No.37842-91 - Use on all 5-speed Big Twins and aftermarket 6-speed 1980-2006 except 2006 Dyna. Use on Sportster or Buell 1991 - 2005.