

Exploded view and parts list

IPB 2

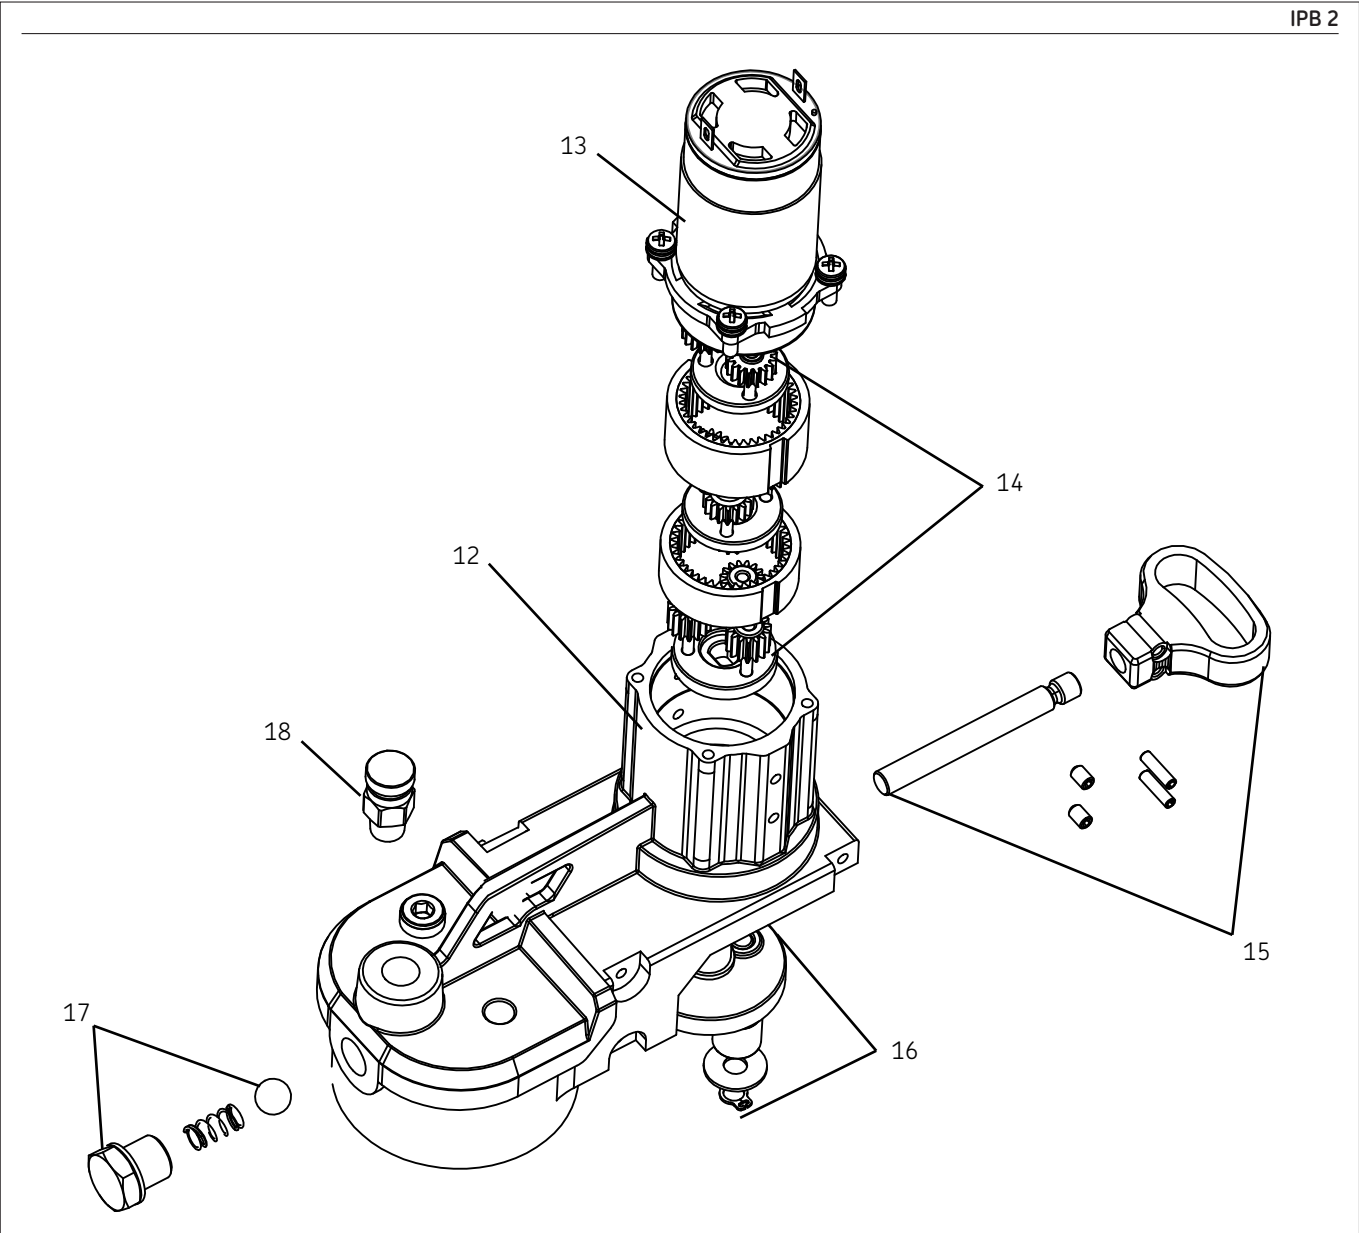


Table 6

Parts list

No.	Part no.	Description
12	280212	Housing with bearing kit
13	271893	Motor with plate kit
14	280214	Gear set kit (1260)
15	280215	Piston, yoke kit
16	280232	Driver assembly kit
17	280231	Check valve kit
18	286315	Vent valve kit

Table 7

Troubleshooting		
Condition	Possible cause	Corrective action
PowerLuber fails to dispense grease.	Grease tube assembly is out of grease.	Check that grease tube assembly has grease.
	Loss of prime.	Repeat priming operation.
	Ball check is not functioning.	Remove ball check clean and inspect ball seat area.
	Clogged whip hose.	Clean or replace whip hose.
PowerLuber continues to lose prime.	Air may be trapped in several locations in container after bulk filling.	Empty grease tube assembly, refill and repeat priming instructions.
	Follower may be binding in grease tube assembly.	Disassemble grease tube assembly and clean. Be sure that follower has properly entered the grease cartridge.
		Verify that the follower is not caught on the rim of the grease cartridge.
		Replace grease tube assembly (5) if damaged.
Battery fails to take a charge.	Check ball seat and check ball dirty.	Clean check ball and check ball seat.
	Charger may not have power. Battery may be bad.	Check that receptacle has power. Replace battery.
Motor fails to run.	Battery needs charging.	Recharge battery.
	Faulty wiring to motor.	Remove battery, disassemble handle and check wiring connections on terminal, trigger switch and motor.

Table 8

Parts list		
No.	Part no.	Description
1	280213	Hardware kit (1260)
2	280208	Pump assembly kit (1260)
3	1230	Hose, .125 in. (3,1 mm) ID x 30 in. (762 mm)
4	280235	Trigger, switch kit
5	280211	Decal kit
6	280210	Handle with screws kit
7	1261	Battery
8	5852	Coupler, midget hydraulic
9	280209	Electrical components kit
10	271882	Grease tube kit
11	280233	Seal kit (1260)
12	280212	Housing with bearing kit
13	271893	Motor with plate kit
14	280214	Gear set kit (1260)
15	280215	Piston, yoke kit
16	280232	Driver assembly kit
17	280231	Check valve kit
18	286315	Vent valve kit
19	1870	Charger 12-20 V (Li-Ion)